

## GLOBAL Rotax MAX Challenge Technical Regulation 2019

Bulletin no.: 2

Valid as of: 2019 06 28

Addendum/changes (highlighted in yellow) to Global RMC Technical Regulation 2019, Edition 2018 10 25

### 6.6.2. Distance of exhaust valve flange at cylinder to piston

Turn crankshaft until the piston just closes the exhaust port.

Insert the exhaust valve gauge (Rotax 277030) as shown in the picture until it stops at the flange.

At the circular contact area between exhaust valve and the flange of the cylinder, a feeler gauge 0,05 0,25 mm may not fit between the gauge and the flange, either on the top or bottom side, but must not fit on both sides.

